
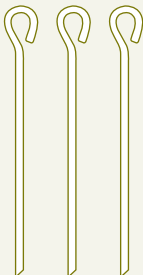


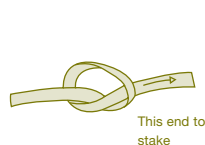


# ArborTie® AT LD100 PROFESSIONAL ANCHORING KIT


The ArborTie® Professional Anchoring Kit is the best way to secure trees in high wind areas or for any trees that need additional support. ArborTie® never damages the tree, and our tough steel eye stakes are easy to install.

AT LD100	KIT CONTENTS* * not drawn to scale	APPLICATIONS & FEATURES
	 <p><b>STEEL EYE STAKES</b> (3) 15" Steel Eye Stakes Eye opening is 1" diameter</p>	 <p><b>ArborTie® GREEN</b> (3) 10' lengths of ArborTie® Green. Flat woven polypropylene material, lock stitch with rounded weave. 3/4" (1.9 cm) wide, and 900 lb. (409.2 kg) break strength.</p>  <p><b>Applications</b> Professional anchoring of trees up to 3" in caliper</p> <p><b>Carton Contents</b> 20 individually packaged ArborTie® Professional Anchoring Kits</p> <p><b>Features</b></p> <ul style="list-style-type: none"> <li>• 900 lb. break strength ArborTie® Green never damages bark</li> <li>• Reusable Steel Eye Stakes</li> <li>• Economical</li> <li>• Easy Installation</li> <li>• Made in the USA</li> </ul>

## INSTALLATION INSTRUCTIONS




1. Tie a simple knot 18" - 24" from either end of the ArborTie®.

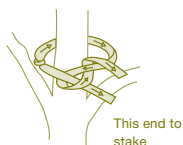


2. Wrap this end around tree. Begin a new knot below the knot that was tied in Step 1.




3. Follow motion of ArborTie® as shown, finishing the knot by pulling tightly on points A and B at the same time.

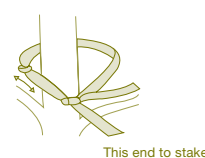

4. Slide the completed knot just up to the knot tied in Step 1. Fasten free end to stake.

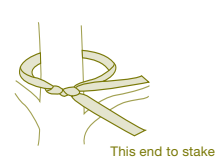


5. The ArborKnot® expands as the tree grows, providing secure, girdle free attachment of ArborTie® to tree.

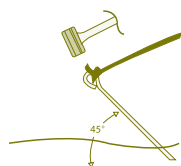


6. Secure long end of ArborTie® to the eye of the stake. Add tension to the ArborTie® by driving the stake into the ground outside of the planting hole at a 45 degree angle to the tree trunk.



7. When driving the stake into the ground, make sure the eye opening is buried. Stake eye should be just even to soil level, as shown above.

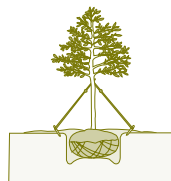

8. Stake should be placed outside of planting hole and driven into the undisturbed soil until the ArborTie® is taut.

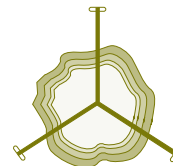

9. Repeat steps 6-8 for each remaining stake. Stakes should be evenly spaced around the tree base.